



Luxea




1. Tasche abnehmen

Zuerst die Gurte und den Reißverschluss vollständig öffnen, dann die Tasche mit einer Bewegung nach oben entfernen.




Beim ersten Mal

Dach auf dem halb aufgezogenen Gestell auffallen. Klett um alle Standbeine befestigen. Dach an der(n) Giebelstange(n) fixieren. Vorsichtig auseinander ziehen.

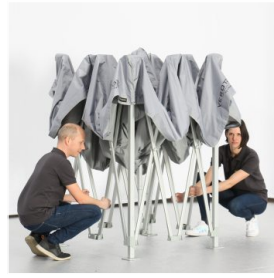

2. Gestell auseinander ziehen

Mit beiden Händen am V der Scherenverbindung nach oben anheben, bei rechteckigen Zelten an den Schmalseiten nehmen. Dabei rückwärts gehen.

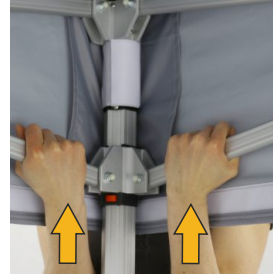

3. Standbeine einrasten

Mit beiden Beinen auf die Fußplatte stellen und die Gleiter an den Standbeinen nach oben drücken bis der rote Knopf einrastet. An allen Standbeinen durchführen



4. Beine paarweise ausziehen


Kugelschnapper drücken, Standbein leicht anheben und mit dem Fuß den Standfuß ausschieben. Alle Standbeine in der passenden Höhe einrasten.



5. Dach innen abspannen

Klettverschlüsse durch die Schlitze ziehen und nach oben gut spannen.


Vor Abbau den unteren Klett unbedingt wieder öffnen!

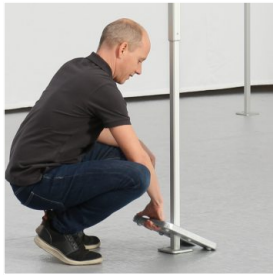

6. Beschwerung / Verankerung

Je nach Standort passende Beschwerung oder Verankerung wählen. Abspannschnüre verwenden

Details siehe Sicherheitshinweise.

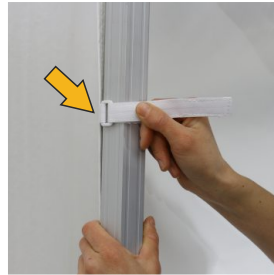

7. Seitenwände anbringen

Seitenwand auspacken, ohne dass sie den Boden berührt. Klett verbinden, dabei von einer Seite zur anderen flach streichen. Zugschlaufen und/oder Zipp schließen



8. VeroTENT verwenden

Wofür auch immer Sie Ihr Falzelt verwenden, wir wünschen Ihnen viel Freude.

Bitte beachten Sie die Sicherheitshinweise!

Abbau & Lagerung

Zubehör und Verankerung / Beschwerung entfernen,

Dachverspannungen lösen (siehe 5. und 3.),

Standbeine paarweise einfahren und Zelt zusammenschieben.

Achten Sie auf Ihre Finger - Klemmgefahr.

Die Dachplane kann bei Abbau am Gestell bleiben.

VeroTENT aufrecht und trocken in der Schutzhülle lagern.



SICHERHEITSHINWEISE - Wichtig! Bitte sorgfältig lesen.

Ver säumnisse bei der Einhaltung können schwere Verletzungen verursachen und es besteht kein Anspruch auf Gewährleistung. Für spätere Verwendung aufbewahren. Allen Nutzern zur Verfügung stellen. Bei Weitergabe des Zeltes mit aushändigen.



Bauen Sie das Zelt bei zu erwartenden oder beginnenden schlechten Wetterbedingungen wie Wind stärker als 40 km/h, Regen, Schneefall etc. nicht auf bzw. unverzüglich ab. Windgeschwindigkeiten ab 40 km/h erkennen Sie so: Frischer Wind, größere Zweige und Bäume bewegen sich und Wind ist deutlich hörbar.



Bringen Sie keine Hitzequellen wie z.B. Feuer, Grills, Heizgeräte oder starke Lampen in die Nähe der Stoffe – Brandgefahr! Beachten Sie auch die Sicherheitshinweise der Gerätehersteller und informieren Sie sich über den ortsüblichen Brandschutz.

Lassen Sie den Pavillon niemals unbeaufsichtigt stehen. Sie tragen die Verantwortung für sichere Verankerung/Befestigung.

VeroTENTs sind für eine vorübergehende Verwendung konzipiert.

Bauen Sie Ihr VeroTENT immer vollständig auf (Plane gespannt, an allen Standbeinen alle Druckknöpfe & Fixierungen eingerastet, passende Verankerung). Das Verbinden von Pavillons beeinträchtigt die Stabilität. Stellen Sie jedes Zelt einzeln auf und lassen Sie mindestens 3 Meter Abstand zwischen den Zelten.

Sichern Sie den Pavillon immer mit passender Verankerung und/oder Beschwerung. Gewichte für harten Boden (Beton, Asphalt) bzw. Anker für weichen Boden (Wiese, Schotter). Achten Sie auf ausreichende Dimensionierung. Verwenden Sie die Abspannschnüre. Achten Sie auf die Stolpergefahr! Bei montierten Seitenwänden steigt die Windanfälligkeit.

Bei Regen können sich auf der Plane Wassersäcke bilden. Entleeren Sie diese. Schneeanlagerungen sind ebenfalls zu entfernen.

Unebenheiten oder Schrägen des Bodens können Sie durch Verstellen der Beine bis zu einem gewissen Grad ausgleichen. Achten Sie aber auf ein waagerechtes Niveau des Daches.

Führen Sie Arbeiten am Pavillon immer zu zweit durch. Achten Sie auf Ihre Finger - Klemmgefahr. Benutzen Sie original Ersatzteile. Verändern Sie das Gestell in keinster Weise.

Besprühen Sie den Pavillon nicht mit Farben, Insektensprays, Raumsprays oder Reinigern usw. Bekleben Sie ihn nicht mit Klebeband, Stickern etc.

Falten und entfalten Sie bei Minusgraden keine transparenten Planen (Fenster). Sie könnten Risse bekommen.

Reinigen Sie die Oberfläche vorsichtig mit warmen Wasser und einer weichen Bürste, um die wasserdichte Schicht nicht zu zerstören. Bei Bedarf können Sie etwas handelsübliches Geschirrspülmittel oder unseren speziellen Zelt- und Gewebereiniger verwenden. Benutzen Sie keinesfalls scharfe Reiniger oder Waschmittel. Geben Sie die Planen keinesfalls in die Waschmaschine. Bei Sonneneinstrahlung über längere Zeit können Planen ausbleichen.

Lassen Sie Gestell, Dach, andere Planen und Zubehör vor dem Zusammenfalten vollständig trocknen um Schimmelbildung zu vermeiden.

Bewahren Sie den zusammengefalteten Pavillon aufrecht unter seiner Schutzhülle an einem trockenen Ort auf.

VERO TENT

PREMIUM

scan here for the
ASSEMBLY VIDEO



Luxea



1. Remove the bag

First open the straps and zip completely, then remove the bag with an upward motion




The first time

Unfold the roof on the half-raised frame. Then attach the velcro around the top of all legs. Fix the roof to the gable pole(s). Carefully pull apart



2. Pull the frame open

Push upwards, with both hands on the V formed by the roof profiles. In the case of rectangular tents take the narrow sides. Move backwards as you do so.

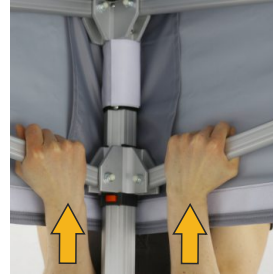

3. Lock in the gliders on legs

Stand with both legs on the foot plate and push the glides on the legs upwards until the red snap button engages. Do this on all legs.



4. Extend legs in pairs


Slightly lift the leg, press the silver snap button and push the footplate down with your foot. Engage all legs at the desired height.



5. Tighten the cover

Pull the velcro fasteners through the slots and tighten upwards


Undo this step before packing up the tent again!

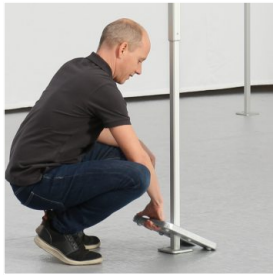

6. Secure the tent correctly

Select suitable weighting or anchoring, depending on the location

Use the guy ropes.
For details, see the safety instructions.

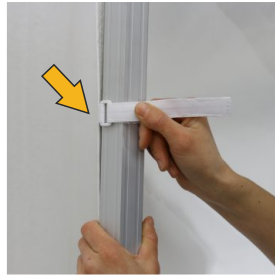

7. Sidewalls and accessories

Unpack the sidewall without it touching the floor. Connect the velcro, smoothing it flat from one side to the other. Close the pull loops and/or zip



8. Use VeroTENT for your needs

Whatever you use your folding tent for, enjoy it.

Please follow the safety instructions.

Taking down and storage

Remove sidewalls, accessories and weights/anchoring.

Loosen the cover and gliders (see steps 5 & 3)

Slide the legs back in pairs and

Push at the corners for folding the frame

Take care of your fingers, they could get jammed.

The cover may remain on the frame.

Store VeroTENT in a dry condition and place.



SAFETY INSTRUCTIONS - Important! Please read carefully!

Observe all the warnings and safety notes. Failure to do so can cause serious injuries and will invalidate the warranty. Keep for future reference. Make them accessible for all users. If you pass on the tent, include the safety instructions.



Take down your gazebo immediately or do not set it up at all if adverse weather conditions such as winds stronger than 40 km/h, rain, snowfall, etc., are expected or beginning. You can recognize wind speeds of 40 km/h and above by the following signs: a fresh breeze, larger branches and trees moving, and the wind being clearly audible.



Do not place any heat sources such as fires, barbecues, heaters or powerful lamps in the vicinity of the fabric - fire hazard! Also observe the safety instructions of the appliance manufacturer and find out about the local fire protection regulations.

Never leave the gazebo unattended. You are responsible for anchoring/weighting/fastening it securely.

VeroTENTS are designed for temporary use. Always erect your VeroTENT completely (cover tensioned, all fasteners and snaps engaged on all legs, suitable anchoring/weights/fastening). Connecting tents will weaken the stability. Each tent has to stand on its own. Keep a minimum distance of 3 meters between tents.

Always secure the gazebo using suitable anchoring and/or weighting. Use weights for hard surfaces (concrete, asphalt) or anchors for soft surfaces (lawn, gravel). Ensure that the dimensions are adequate. Use the guy ropes. Be aware of the risk of tripping! The gazebo is more susceptible to wind when the side panels are fitted.

In the event of rain, water pockets can form on the roof cover. Empty these. Accumulations of snow must also be removed.

Uneven or sloping floors can be levelled out to a certain extent by adjusting the legs. However, make sure that the roof cover is levelled.

Always work on the pavilion in pairs. Take care of your fingers, they could get jammed. Always use original spare parts. Do not change the frame in any way.

Do not spray the gazebo with paints, insect sprays, room sprays or cleaners etc. Do not use tape, stickers etc.

Do not fold or unfold transparent fabric (windows) in sub-zero temperatures. They could crack.

Clean the surface carefully with warm water and a soft brush so as not to destroy the waterproof layer. If necessary, you can use a little commercial dishwashing detergent or our special tent and fabric cleaner. Never use harsh cleaning agents or detergents. Never put the fabric into the washing machine. Colours of the fabrics may fade if exposed to sunlight for an extended period of time.

Allow the frame, roof, all fabric and accessories to dry completely before folding to prevent mould growth. Store the folded pavilion upright under its protective cover in a dry place.